705 Series Air Operated 4 & 6 Gallon

Model: C70504-01, 02 C70506-01, 02



MODEL C70504 AIR OPERATED VACUUM DRY RECOVERY ONLY, AND C70506 WET/DRY REOVERY VACUUMS

OPERATING INSTRUCTIONS

INSPECTION

Carefully unpack and inspect your machine for shipping damage. Each unit is tested and thoroughly inspected before shipment, therefore, any damage is the responsibility of the delivering carrier who should be notified immediately. Read all instructions carefully before operating.

SPECIAL WARNING

Air operated equipment can generate static electricity during use. Static dissipating arcing can be generated and occur if equipment and accessories are not grounded. Risk of explosion is possible if operated near explosive materials or vapors. Do not operate this equipment near flammable materials such as solvents, thinners, fuels, grain dust, etc.

AIR PRESSURE AND C.F.M. VOLUME REQUIRED

For maximum performance, operate with 1/2" air pressure line, 80 PSI (max. 100 PSI) and 37 input C.F.M. Air pressure control valve can be regulated to operate with lower pressure and C.F.M. when maximum is not required.

MAINTENANCE AND USAGE

Air supplied to vacuum must be clean and dry to avoid contamination and to maintain optimum performance.

Empty tank, clean filter bag and replace disposable filters regularly. Clogged filters restrict air flow and results in reduced vacuum performance.

Always shut off main air supply and open air valve at vacuum to relieve pressure before disconnecting air pressure line.

ASSEMBLY PROCEDURE FOR MODEL C70004 DRY RECOVERY VACUUM

(See schematic on page 2)

- 1. Place filter bag assembly #2 onto tank assembly #4.
- 2. Place lid assembly #1 onto tank and fasten lid latches.
- 3. Connect 1/2" air pressure line to shut off valve on lid.
- 4. Attach vacuum hose assembly to intake, vacuum intake will accept 1 1/2" and/or 2" hose. OPTION: For fine dust recovery, a filter bag protector #3 is recommended to be installed ahead of the filter bag assembly #2. (Must be ordered as separate item #761177PKG of 10.)
- 5. To operate, open air shut off valve to desired setting.

CLEANUP PROCEDURE

- 1. Shut off air supply at lid assembly.
- 2. Loosen lid latches and remove lid assembly.
- 3. Remove cloth filter bag assembly.
- 4. When filter bag protector is used, remove protector.
- 5. Empty tank into suitable trash container.
- 6. Reassemble following above procedure.

ASSEMBLY PROCEDURE FOR C70006


(See schematic on page 2)


Model C70506 is for wet/dry recovery. For dry recovery, use same procedure as outlined for C70504.


For wet recovery, remove filter bag #2 and filter protector #3 if used. Ball float within float cage will actuate at 3 1/2 gallon recovery level.

Always empty and dry tank assembly at end of each operating day or when vacuum will not be in use over extended period of time.

- 700004 Lid Assembly complete
 805044 Cloth bag assembly complete
- 3. 761177PKG Filter bag optional
- 4. 908001SS, 908002PTD Tank assembly complete
- 700004 Lid assembly complete
 805041 Cloth bag assembly complete
- 3. 761177PKG Filter bag optional
- 4. 907007SS, 907008PTD Tank assembly complete

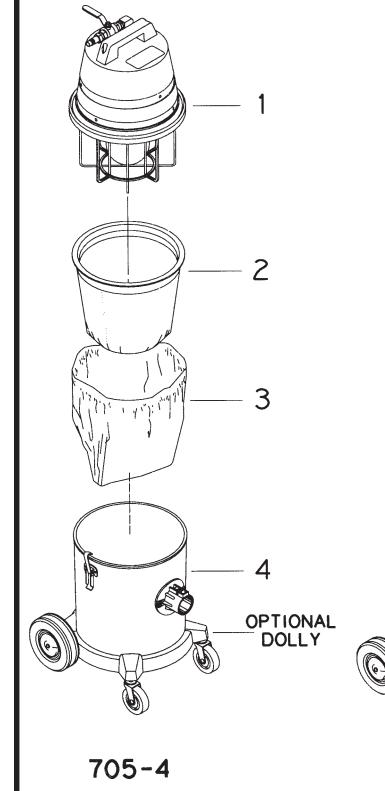


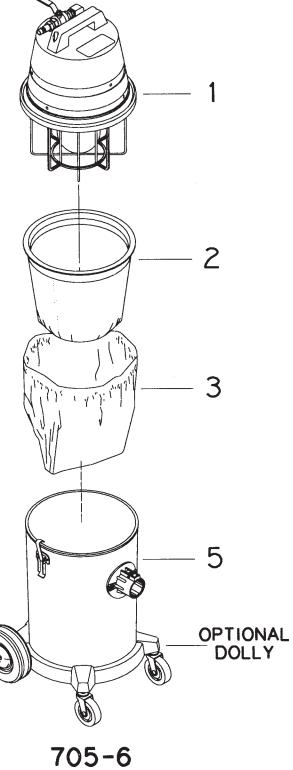

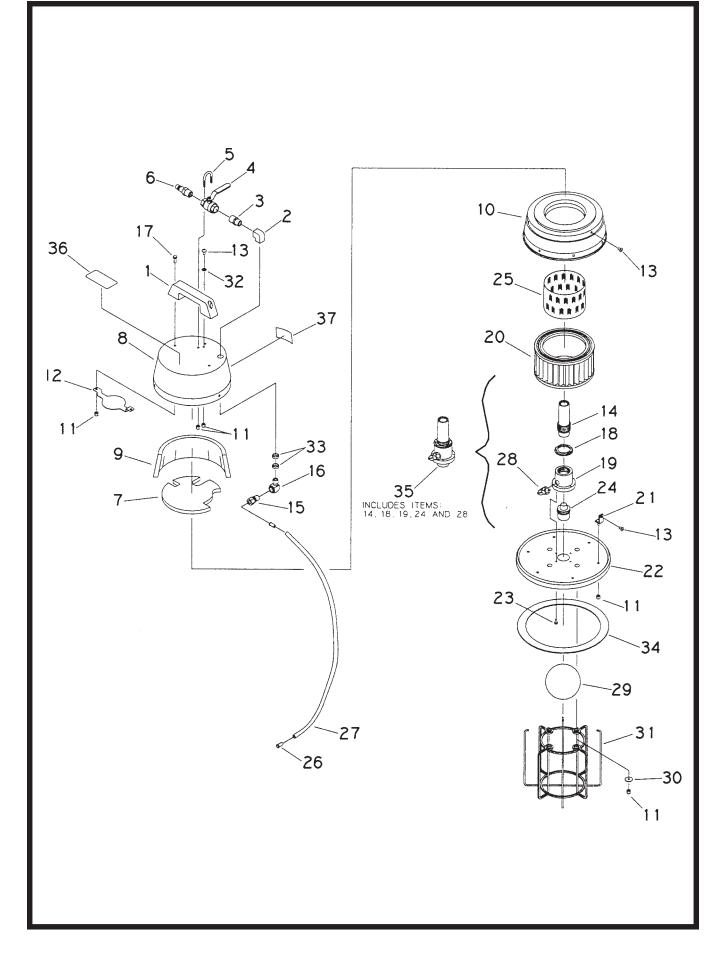

PARTS LIST

Item No	Part No	Quantity	Description
1	460001	1	Handle
2	700028	1	3/8 x 3/8 Brass Elbow
3	420017	1	Hew Nipple Reducer
4	712105	1	U-Bolt
5	701009	1	.50 Valve
6	701010	1	.50 Coupler
7	700033	1	Dome Felt
8	700031PTD	1	Top Cover
9	700032	1	Felt Liner
10	700030PTD	1	Filter Cover
11	712667	15	1/4-20 SS Nyloc Nut
12	700034	1	Air Deflector
13	710178	10	1/4-20 x .50 SCR-MC STPL
14	700012	1	Venturi Exhaust Tube
15	420008	1	Male Connector
16	830062	1	3/8 x 3/8 Brass ST90
17	711204	2	BLT HH 1/4-20 x .75 STPL
18	700014	1	Locking Nut
19	700011	1	Venturi Housing
20	700037	1	Exhaust Filter
21	832106	6	Bracket Mounting Tab
22	700029PTD	1	Bottom Pan
23	712822	4	SCR-THMC 10-24 x .50 STPL
24	700013	1	Venturi Intake
25	700038	1	Perforated Shield
26	420011	2	Brass Insert
27	700020	1	Poly Hose 20" Long
28	420009	1	Male Elbow 469F
29	380046	1	Hollow Rubber Ball
30	712761	4	WSR-Flat .25 x 1.01 x .06 SS
31	380045CTD	1	Float Cage Assembly
32	711505	1	WSR-Flat 1/4
33	829285PLT	2	Spacer - Zinc Plated
34	290031	1	Lid Gasket
35	700010	1	Venturi Assembly
36	715003	1	Decal, Air Pressure
37	715029	1	Decal, Serial Nameplate
			•

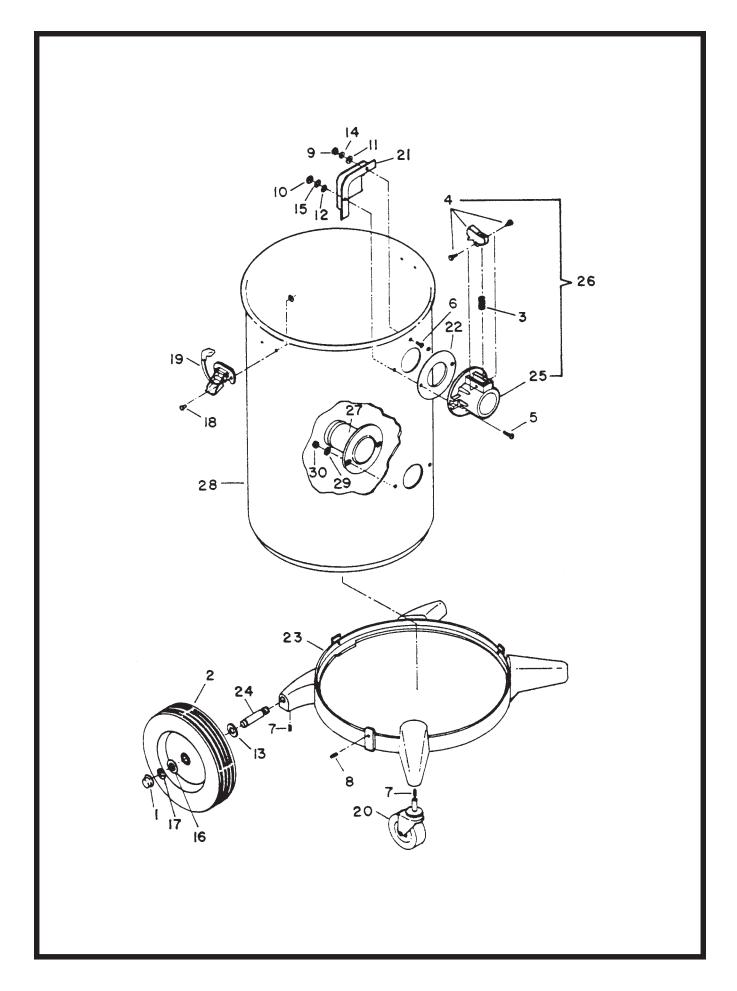

PARTS LISTING

ITEM NO. 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28A 28B 28C 28D 29 30 **** ****	PART NO. 130032 170047 390002 390001 712824 710530 711005 711006 711304 711304 711502 711503 711502 711543 711543 711542 711543 711594 711713 711594 711713 711915 761054 900033 900035 390087 900055PTD 900066 390101 390101 390110 750118 900107 900083 900093 900092 712320 712638 805041 805044 761177PKG 384003PKG	QTY. 2 2 1 1 2 1 4 3 1 2 1 2 2 2 4 2 2 1 1 2 2 2 4 2 2 1 1 2 1 1 2 2 1 1 2 2 1 1 2 2 1 1 2 2 1 1 2 1 2 1 1 2 1 2 1 1 2 1 1 2 1 1 2 1 1 2 1 1 2 1 2 1 1 2 1 2 1 1 2 1 2 1 1 2 1 1 2 1 1 2 1 2 1 1 2 1 1 2 1 2 1 1 2 1 2 1 1 2 1 2 1 1 2 1 2 1 1 2 1 2 1 1 2 1 2 1 2 1 1 2 1 2 1 1 2 1 2 1 1 2 1 2 1 1 2 1 2 1 2 1 2 1 1 2 1 2 1 2 1 1 2 1 2 1 1 2 1 2 1 1 2 1 2 1 1 2 2 2 1 1 2 2 2 1 1 2 2 2 2 1 1 1 2 2 2 2 1 1 1 2 2 2 2 1 1 2 2 2 2 1 1 2 2 2 2 2 2 2 2 2 2 1 1 1 2	DESCRIPTION Cap, Retainer Wheel 6" Spring .275 O.D. Trigger with Pins SCR-MC 10-24 x .75 ST PL SCR-MC 8-32 x .50 Brass SCR-SK 1/4-20 x .31 SCR-MC 1/4-20 x .62 Nut-Hex 8-32 ST PL Nut-Hex 10-32 ST PL WSR-Flat #8 WSR-Flat #8 WSR-Flat #10 WSR. Vave .50 x .75 x .02 WSR, Lock #8 WSR, Helical Lock #10 WSR, Flat .56 x .88 x .03 NI Retaining, Ring-E Ext50 Rivet .19 x .28 x .37 HD STNI Latch Caster, Swivel Deflector, Intake Gasket Bracket, Wheel 4/6 Gal. Axle, Plated Intake Aluminum Intake Assy. Aluminum Tube Assy. Tank, 4 Gal. SS High Intake Tank, 4 Gal. SS Low Intake Tank, 6 Gal. SS Low Intake WSR-Nylon .22 x .45 x .04 Nut-Nyloc 10-24 Cloth Filter 6 Gal. Cloth Filter 4 Gal. Paper Filter Protector (12) Disposable Paper Bag (10)
***	384003PKG	1	Disposable Paper Bag (10)
	380049PLT	1	Bag Frame

LIMITED WARRANTY

Minuteman International, Inc. warrants to the original purchaser/user that this product is free from defects in workmanship and materials under normal use and service for a period of three years from date of purchase. In addition, Minuteman International, Inc. will, at its option, honor labor warranty claims for the first 12 months from date of sale, provided such claims are submitted through and approved by factory authorized repair stations. Minuteman International, Inc. will, at its option, repair or replace without charge, except for transportation costs, parts that fail under normal use and service when operated and maintained in accordance with the applicable operation and instruction manuals.

This warranty does not apply to normal wear, or to items whose life is dependent on their use and care, such as belts, cords, switches, hoses, rubber parts, electrical motor components or adjustments. Parts not manufactured by Minuteman International, Inc. such as engines, batteries, battery chargers, hydraulic pumps, and tires are covered by and subject to the warranties and/ or guarantees of their manufacturers. Please contact Minuteman International, Inc. for procedures in warranty claims against these manufacturers.

Special warning to purchaser — Use of replacement filters and/or prefilters not manufactured by Minuteman International, Inc. or its designated licensees, will void all warranties expressed or implied.

A potential health hazard exists without exact original equipment replacement.

All warranteed items become the sole property of Minuteman International, Inc. or its original manufacturer, whichever the case may be.

Minuteman International, Inc. disclaims any implied warranty, including the warranty of merchantability and the warranty of fitness for a particular purpose. Minuteman International, Inc. assumes no responsibility for any special, incidental or consequential damages.

This limited warranty is applicable only in the U.S.A. and Canada, and is extended only to the original user/purchaser of this product. Customers outside the U.S.A. and Canada should contact their local distributor for export warranty policies. Minuteman International, Inc. is not responsible for costs or repairs performed by persons other than those specifically authorized by Minuteman International, Inc. This warranty does not apply to damage from transportation, alterations by unauthorized persons, misuse or abuse of the equipment, use of non-compatible chemicals, or damage to property, or loss of income due to malfunctions of the product.

If a difficulty develops with this machine, you should contact the dealer from whom it was purchased.

This warranty gives you specific legal rights, and you may have other rights which vary from state to state. Some states do not allow the exclusion or limitation of special, incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions and limitations may not apply to you.



World Headquarters Minuteman International, Inc. 111 South Rohlwing Road Addison, Illinois 60101

(630) 627-6900 FAX (630) 627-1130 Minuteman Canada, Inc. 2210 Drew Road Mississauga, Ontario L5S 1B1

(905) 673-3222 FAX (905) 673-5161 987723 Printed in U.S.A.