

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	G131	connector, cord lock	2
2	E550	power cord, pigtail, 30', 12/3, yel	2
3	H220	fitting, strain relief, cord	2
4	H221	nut, lock, 1/2" steel	2
5	H219	cap, axle, 1/2"	2
6	H251	wheel, 12"	2
7	H254	washer, axle, cut 1/2" id	5
8	H371	axle, 1/2" x 18-1/2", sp, breeze	1
9	P731	base, speedster	1
10	H216	nut, lock, 1/4-20, nylon insert	16
11	H210	washer, 1/4" flat, s/s	20
12	H342	bolt, 1/4-20 x 1" hex head, s/s	12
13	H666	caster, 5"	2
14	H485	handle, breeze	2
15	H211	washer, 1/4" id x 1" od, flat, s/s	8
16	H768	bolt, 1/4-20 x 3/4" serrated hex flange, zinc	12
17	H206	screw, #10-32 x 5/8" hex head, zinc	4
18	H296	guard, cooling fan, wire	3
19	C317	fan, cooling, 115V	1
20	H343	screw, #10 x 5/8" hex head, zinc	8
21	H273	nut, kep, #10-32 zinc	4
22	H256	screw, #10-32 x 3/4" phl pan head, zinc	2
23	H528	bracket, heater mounting, dual	1
24	H903A	heater, aluminum cast, single w/ wrap & drilled holes	2
25	AH108S	sol hose, 1/4" x 24 1/2", (OAL), f x fsw, 3000psi	1
26	B103	elbow, brass, 90 deg, 1/4" mpt x 1/4" fpt	10
27	AH156	hose, 3/8" x 6", (OAL), f x fsw, surge, 1600psi	1
28	E519	heating rod, 1000W, 115V	2
29	E574	Thermostat, 310°F ± 10°F, Manual, 1/4"	2
30	H274	screw, #6 x 3/16, phl pan head, self-lapping	10
31	E573	Thermostat, 200°, Auto, 1/4"	2
32	G059	exhaust boot, plastifol	2
33	G004	gasket, vacuum motor	2
34	C302	vac motor, 3 stage, 115V, tangential	2
35	H501	vac support, 3 stage, 4-1/16"	6
36	H217	clamp, hose, 2-1/4 DIA	3
37	PH628-20	vac hose, 2", wire reinforced	1
38	H544	cuff, 2"	1
39	H201	bolt, 1/4-20 x 1/2" hex head, zinc	8
40	H601	plate, manifold, parallel	1
41	P750	manifold, dual vac, parallel	1
42	B160	adapter, brass, 1/2" barb x 3/8" fsw, ball end	1
43	H347	clamp, hose, 5/16-29/32	8
44	PH615-28	sol hose, 1/2" kur 100psi	1
45	B175	filter, cup, in-line	1
46	PH615-1.5	sol hose, 1/2" kur 100psi	1
47	B172	elbow, brass, 90 deg, 1/2" barb x 3/8" mpt	1
48	B110	adapter, brass, 1/4" sw barb x 1/4" fpt, w/gasket	2
49	PH634-22	sol hose, 1/4" kur 150psi	1
50	B109	adapter, brass, 1/4" barb x 1/4" mpt	2
51	PH634-25	sol hose, 1/4" kur 150psi	1
52	H902	valve, prime, high pressure	1
53	C313C	regulator, 450 psi	1

ITEM NO.	PART NO.	DESCRIPTION	QTY.
54	B652	elbow, brass, 90 deg, 3/8" mpt x 1/4" mpt	3
55	B246	plug, brass, 3/8" mpt, hex	2
56	C313	pump, 450 psi, 115V	1
57	AH184	hose, 3/8" x 14-1/2" (OAL), f surge	1
58	AH105	hose, 3/8" x 17-1/2", (OAL), f x fsw, surge, 1600psi	1
59	H922	knob, thumb screw, for bracket	2
60	H213	washer, 1/4" lock, s/s	6
61	H912	bracket, rear, fb/spy	1
62	H770	bolt, 1/4-20 x 1/2" serrated hex flange, zinc	6
63	H390A	Bracket, L 070-036	2
64	H203	bolt, 1/4-20 x 1-1/4" hex head	2
65	G052	washer, buna 1-1/8" od x 3/16" id	12
66	H215	nut, hex, 1/4-20 s/s	2
67	P732	sol tank, speedster	1
68	H212	washer, 9/16" id x 1" od, flat, s/s	8
69	H413	washer, nylon, 9/16" id x 1-1/16" od x .031	4
70	B106	nipple, brass, 1/4" x close	2
71	B111	adapter, brass, extender, 1/4" mpt x 1/4" fpt, hex	3
72	B102	qd, brass, 1/4" f	1
73	B107	nipple, brass, 1/4" m, hex	1
74	H316	bolt, 1/4-20 x 1-1/2" hex head, s/s	2
75	H378	bracket, front hinge, sp/tb	1
76	B119A	filter, strainer, 1/2"	1
77	B210	bushing, brass, 1/2" mpt x 3/8" fpt, hex	1
78	H299	washer, 11/16" id x 1-1/2" od x .075, s/s	5
79	B216	nipple, brass, 3/8" x close	1
80	B186	elbow, brass, 90 deg, 3/8" mpt x 3/8" fmp	1
81	H490	float, 2", ball style	1
82	P726	elbow, 2" float	1
83	H297	screw, #8 x 1/2", hex head, zinc	3
84	P682	pipe, pvc, 2"	1
85	P684	adapter, pvc, 2" fmsl x fml	1
86	G002	gasket, 2" inlet polyethylene, 3" O.D 2.35" ID	1
87	H225	valve, drain, 1-1/2"	1
88	H226	spout, drain, 45 degree	1
89	P733	vac tank, speedster	1
90	A926	elbow, inlet assembly 2"	1
91	G090	lid, vac tank, black, 7"	1
92	H304	screw, #8 x 5/8 phl oval, s/s	6
93	G060	gasket, vac lid, 6.5" id 7.5" o.d	1
94	G083	gasket, 2" inlet	1
95	P685	inlet, 2"	2
96	E5128	light, indicator, 125v (amber)	1
97	H337	plate, switch, sp, 4 hole w/gauge	1
98	E511	light, red, 250v	2
99	E515	switch, rocker, 2 position	3
100	E516	switch, rocker, 3 position	1
101	H389	screw, #10-32 x 1/2" SHCS, alloy	1
102	H612	washer, #8 flat, s/s	3
103	H308D	gauge, pressure, 2000 PSI	1
104	H246	screw, #8-32 x 3/8" SHCS, alloy	2
105	B136	elbow, brass, 90 deg, 1/4" mpt x 1/4" mpt	1

REVISIONS			
REV.	DESCRIPTION	DATE	APPROVED
OD	ORIGINAL DRAFT	6/15/2007	JFL



ITEMS NOT SHOWN:

PART NO.	DESCRIPTION	QTY.
E530	power cord, ext, 50', 12/3 yel	2
E554	controller, circuit light	1
G010	filter, bag, vac tank	1
G085	gasket, strip, 3/4" x 36" x 1/8"	2
H479	cuff, hose, 1-1/2" x 2", crushproof, gray	1

UNPACKING THE MACHINE

Before unpacking the machine, inspect all boxes and pallets for signs of shipping damage. Please be aware that all packages leave Mytee Products in perfect condition. Any equipment or carton damage caused during shipping is the responsibility of the freight company, and should be handled by filing a claim with the carrier.




SAFETY LABELS

The safety labels appear on the machine in the locations indicated. Replace labels if they become damaged or cannot be read.

WARNING: Flammable materials can cause an explosion or fire. Do not use flammable materials in tank(s). Flammable materials or reactive metals can cause explosion or fire.

WARNING LABEL - Located on back. Label warns operator of safe practices of equipment.

MACHINE COMPONENTS

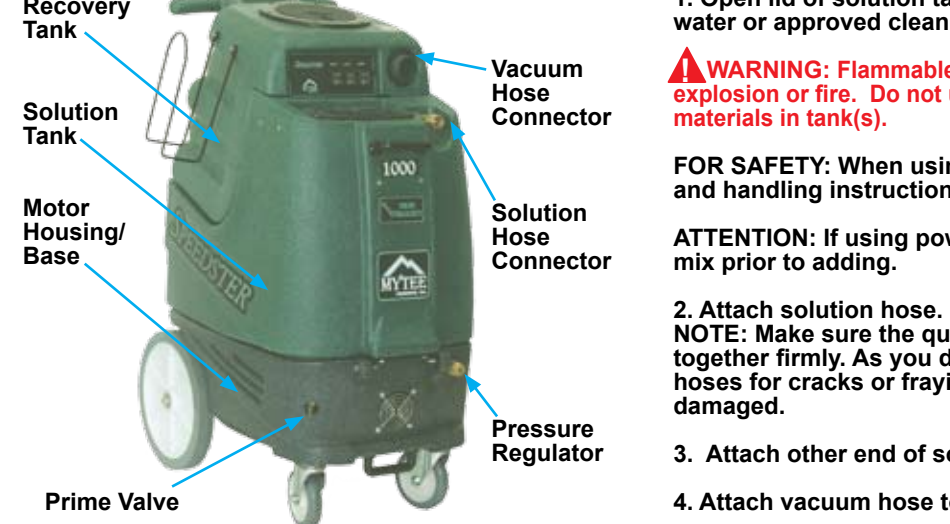

PRE-OPERATION

- Vacuum carpet and upholstery and remove other debris.
- Perform MACHINE SETUP procedures.
- Inspect power cord for damage.

OPERATION

7. Turning machine on.

- Turn pump switch on.
- Pull up on power prime lever for 30 seconds. This will prime the pump.
- Pull up on wand lever to release air in the line. Hold lever until you have a steady flow of water coming out of the wand.
- Once pump is primed and you have pressure in the solution line, turn on heater switch(es) (if model is equipped with heater) and wait a few minutes for water to heat up.
- Once water is heated, turn on vacuum motors and begin cleaning.

NOTE: When cleaning upholstery, always check manufacturer's cleaning instructions.

TIPS

- Work away from outlet and power cord to prevent cord damage.
- Use a recommended foam control solution in the recovery tank to prevent vacuum motor damage. Periodically check for excessive foam buildup in solution tank, and recovery tank.
- To clean heavily soiled areas, repeat cleaning path from different direction.
- When ball float shuts off vacuum, it is time to empty the dirty water from the recovery tank, and refill solution tank.
- After cleaning, relieve water pressure from tool before disconnecting hose. Squeeze trigger for five seconds after turning main power switch off.

MAINTENANCE

FOR SAFETY: When servicing machine, unplug cord from wall outlet.

- Turn machine off and unplug power cord.
- Remove solution & vacuum hose.
- Attach 45°-drain elbow to dump valve and lift up drain valve lever to empty recovery tank.

DRAINING RECOVERY TANK

MACHINE MAINTENANCE

To keep machine in good working condition, simply follow machine's daily and weekly maintenance procedures. Check valves and relief valves should be replaced annually.

FOR SAFETY: When servicing machine, unplug cord from wall outlet.

DAILY MAINTENANCE

- Empty and rinse out solution tank thoroughly.
- Wipe off power cord and check for damage, replace if necessary. Coil cord neatly after use.
- Clean machine with an all purpose cleaner and damp cloth.

WEEKLY MAINTENANCE (EVERY 20 HOURS OF OPERATION)

- Flush solution system with Mytee system maintainer to dissolve normal chemical buildup.
 - Pour 7.5L (2 gal) of hot water 60°C (140°F) into solution tank. Add Mytee system maintainer according to mixing instructions on bottle

FOR SAFETY: When using machine, follow mixing and handling instructions on chemical containers.

- Operate machine for one minute.
- Shut off machine and allow remaining solution to break down chemical buildup overnight.
- Next day, spray out remaining solution and flush system with 11L (3gal) of clean water.

- Inspect vacuum hoses for holes and loose cuffs. Drain and dry the vacuum hose as well.

- Inspect spray pattern for clogging. If clogged, remove spray tips and soak them in a recommended liquid neutralizer for up to six hours. To remove spray tip, twist spray tip body counter-clockwise.

- Lubricate wheels with water resistant oil.

- Inspect machine for water leaks and loose hardware.

- Remove float shut-off screen from recovery tank and clean.

NOTE: The float shut off screen is not glued on. Simply pull it off.

STORING MACHINE

- Before storing machine, be certain to completely drain and rinse tanks of all water and solution.

- Drain and dry the vacuum hose as well, using the drain hose provided

- Store machine in a dry area in the upright position.

- Open recovery tank cover to promote air circulation

ATTENTION: Do not expose to rain. Store indoors.

ATTENTION: If storing machine in freezing temperatures, be sure that machine and solution system are completely drained and dry.

Mytee Products, Inc. endeavors to provide high quality products and product support to its customers and therefore backs up all of its new products purchased from Mytee Products Inc. ("Mytee") or any authorized Mytee distributor/service center with this limited warranty. This limited warranty begins on the date of the customer's purchase and is valid and available to the original purchaser only. Mytee's products are for commercial use only and are not intended for personal, family or household uses.

HOWEVER, OTHER THAN SET FORTH HEREIN, MYTEE GIVES NO WARRANTY, EXPRESS OR IMPLIED, AS TO DESCRIPTION, QUALITY, MERCHANTABILITY, FITNESS FOR ANY PARTICULAR PURPOSE, "PRODUCTS WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. MYTEE SHALL IN NO WAY BE RESPONSIBLE FOR THE PROPER USE AND APPLICATION OF THE GOODS. MYTEE NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR MYTEE ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OF MYTEE'S GOODS. THIS LIMITED WARRANTY POLICY MAY BE CHANGED OR WITHDRAWN BY MYTEE AT ANY TIME WITHOUT NOTICE.

WEAR PARTS 90-DAY LIMITED WARRANTY: Mytee will replace all wear parts for 90 days from the date of original purchase. "Wear parts" are items which wear out as a result of use and the passage of time and are consumed despite normal use. "Wear parts" include brushes, rollers, wheels, gaskets, hoses, electrical terminals, switches, the- motors, pistons/parts, filters, bearings, brushes, solenoids, o-rings, bulbs, heating elements, castors, or other parts deemed wear items in Mytee's sole discretion. This warranty covers the cost of replacement only and does not cover shipping or labor costs.

YEAR PARTS 90-DAY LIMITED WARRANTY: Mytee will replace all wear parts for 90 days from the date of original purchase. "Wear parts" are items which wear out as a result of use and the passage of time and are consumed despite normal use. "Wear parts" include brushes, rollers, wheels, gaskets, hoses, electrical terminals, switches, the- motors, pistons/parts, filters, bearings, brushes, solenoids, o-rings, bulbs, heating elements, castors, or other parts deemed wear items in Mytee's sole discretion. This warranty covers the cost of replacement only and does not cover shipping or labor costs.

PUMP, VACUUM MOTOR AND HEATER 1-YEAR LIMITED WARRANTY: Mytee warrants that pumps, vacuum and floor machine motors, and heaters will be free from manufacturing defects, defects in workmanship, and defects in material for one (1) year from the date of original purchase. This does not apply if the pump, vacuum motor, or heater has worn brush or brush rings, chemical buildup, or evidence of abuse, misuse, or tampering. This warranty covers the cost of replacement or repair only and does not cover shipping or labor costs.

HOUSING 5-YEAR LIMITED WARRANTY: For five (5) years from the date of purchase, Mytee warrants a percentage of the cost of replacement of rationally-modified housings pro-rated as follows: Mytee will pay 100% of replacement cost in the first year from the date of purchase, 75% of replacement cost in the second year from the date of purchase, 50% in the third year, 25% in the fourth year, and 12% in the fifth year. Replacement cost does not include the cost of shipping or labor.

LIMITATION OF DAMAGES: THE REMEDY OF REPLACEMENT OR REPAIR OF ANY DEFECTIVE GOODS SHALL BE THE EXCLUSIVE REMEDY UNDER ANY WARRANTY MADE BY MYTEE, WHETHER EXPRESS OR IMPLIED, IN NO EVENT SHALL MYTEE BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, PROPERTY DAMAGES, OR PERSONAL INJURIES.

All limited warranties are void for, and Mytee does not warrant in any way, any product that evidences misapplication, improper installation, abuse, lack of maintenance, negligence in use or care, abnormal use, alteration or design, use of other than Mytee or a Mytee authorized distributor, and/or servicing, installation of parts, or repairs by anyone other than Mytee or a Mytee authorized distributor or service center.


Mytee may make changes in products it manufactures and markets at any time; these changes are made without obligation to change, retrofit, or upgrade any product previously sold or manufactured. Mytee has no obligation to honor the limited warranties set forth hereon unless the original purchaser, promptly upon discovering the warranty claim and prior to continuing to use the product, contacts Mytee or a Mytee authorized distributor or service center to describe the claim and to receive and follow instructions for documenting and resolving the claim. In addition, the purchaser must provide the product to which the claim applies to Mytee or a Mytee authorized distributor or service center for a thorough inspection.

If any provision or portion of this limited warranty policy is found to be unenforceable, then the remaining provisions and portions shall remain valid and enforceable. If any provision or portion of this limited warranty policy is found to be unenforceable, it shall be construed to apply to the fullest extent possible without violating the law.


The validity, construction and performance of this warranty policy shall be governed by the law of the State of California. This warranty respects to conflicts of laws principles. The exclusive jurisdiction of any legal action arising from or related to, without respect to conflicts of laws principles, shall be in the State of California and no legal action shall be commenced elsewhere.

WWW.MYTEE.COM


PHONE: 858-679-1191 | FAX: 858-679-7814
MYTEE PRODUCTS, INC | 13655 STOWE DRIVE | POWAY, CA 92064



SPEEDSTER 1003DX



Instruction Manual & Safety Guide



WARRANTY


STEP 1

FILL SOLUTION TANK.



STEP 2

ATTACH HOSES.

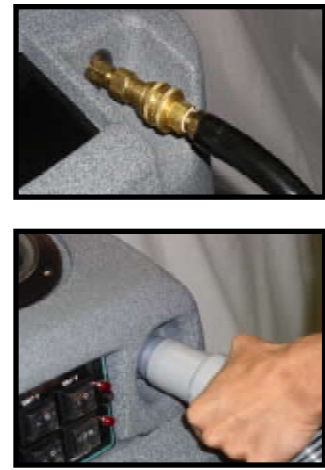


STEP 3

ATTACH HOSES TO TOOL.



STEP 4

PLUG UNIT INTO (2) 20 AMP GROUNDED OUTLETS.

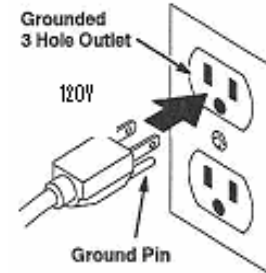

STEP 5

ENSURE DUAL CIRCUIT FINDER IS LIT.




STEP 6

TURN ON PUMP AND PRIME FOR 30 SECONDS USING PRIME LEVER.



STEP 7

KEY WAND UNTIL YOU HAVE A STEADY FLOW.

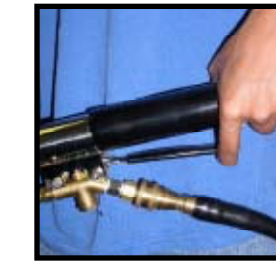

STEP 8

RELEASE WAND TRIGGER. TURN ON HEATER.



STEP 9

WAIT 8 - 10 MINUTES FOR UNIT TO PRE-HEAT.



STEP 10

RE-KEY WAND UNTIL HOT WATER BEGINS FLOWING.



STEP 11

ONCE HOT WATER IS FLOWING, RELEASE WAND AND PRE-HEAT AN ADDITIONAL 4-5 MINUTES.



STEP 12

TURN ON THE VACUUM MOTORS.



STEP 13

BEGIN CLEANING. MAKE TWO DRY PASSES TO EVERY WET PASS.



STEP 14

FOR UPHOLSTERY CLEANING, UNPLUG WAND AND ATTACH UPHOLSTERY TOOL.



STEP 15

WORK AWAY FROM CORDS TO AVOID DAMAGE.




STEP 16

USE A DEFOAMER IN YOUR RECOVERY TANK.



STEP 17

TO CLEAN HEAVILY SOILED AREAS, REPEAT CLEANING FROM DIFFERENT DIRECTION.

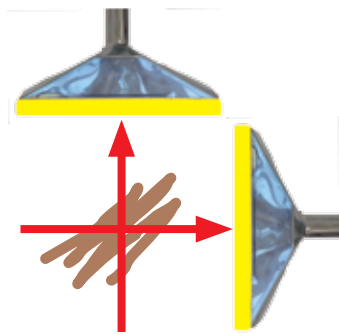


STEP 18

WHEN FLOAT SHUTS OFF VACUUM, EMPTY TANKS.



STEP 19

WHEN WORK IS COMPLETE, UNPLUG CORDS AND HOSES.

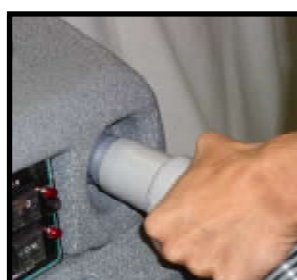

STEP 20

WRAP AND CLEAN HOSES. CLEAN ALL TANKS.



FAQ'S FOR SPEEDSTER 1003DX

- Q: How much does the 1003DX weigh and what are the shipping dimensions?
A: 140 Pounds - Box dimensions are 20"x30"x47". Must ship motor freight.
- Q: What comes standard with the 1003DX?
A: The 1003DX comes with one hose hanger (H375), one drain spout (H226), and two extension cords (E530). Please see owner's manual for breakdown.
- Q: Does Mytee recommend a tool for the machine?
A: A variety of tools can be used with the unit, including our 8300 wand, 8400 upholstery tool, and SM100 rotary extractor.
- Q: Where do I plug the machine in?
A: The 1003DX requires two separate 20A grounded circuits. Please note: GFI outlets may trip before the breaker setting.
- Q: How will I know when I find two separate circuits?
A: The amber indicator light on the switch plate will illuminate when the power cords are plugged into two separate circuits.
- Q: What is the proper pre heat cycle for the 1003DX?
A: Turn pump switch to the on position and prime pump through the solution hose and the tool. Then turn the heater switch to the on position. Let the machine sit idle for 8-10 minutes. Spray tool until you feel the hot water from the jet. Let machine sit idle for 3-5 minutes. This will insure the water in the heater and hoses will be at the hottest point to start cleaning.
- Q: How do I prime the pump for 1003DX?
A: Hook up hoses and tool to the machine. Turn then press the prime lever to release the air from the pump head.
- Q: Are the pumps re-buildable for the 1003DX?
A: Yes, both the seals and the pistons have repair kits available. Please see the pump manual that shipped with your machine for the maintenance schedule.
- Q: Is there anything I can do to increase the expected life of my machine?
A: Running the vacuum motors with the tank empty and lid off will allow excess moisture in the vacs to dry off. You should also run a System Maintainer through the system to keep the hoses, pump, and heater clean and free of debris.

SAFETY PRECAUTIONS

This machine is intended for commercial use. It is designed to clean carpet and upholstery in an indoor environment and is not constructed for any other use. Use only recommended cleaning solutions and accessory tools.

All operators must read, understand and practice the following safety precautions.

The following safety alerts symbols are used throughout this manual as indicated in their description:


⚠ WARNING: To warn of hazards or unsafe practices which could result in severe personal injury or death.

FOR SAFETY: To identify actions which must be followed for safe operation of equipment.

The following information signal potentially dangerous conditions to the operator or equipment:

- FOR SAFETY:**
- Do not operate machine:
 - Unless trained and authorized.
 - Unless operator manual has been read and understood.
 - In flammable or explosive areas.
 - Unless cord is properly grounded.
 - With damaged cord or plug.
 - If not in proper operating condition.
 - In outdoor areas.
 - In standing water.
 - Before operating machine:
 - Make sure all safety devices are in place and operate properly.
 - When using machine:
 - Do not run machine over cord.
 - Do not pull machine by plug or cord.
 - Do not pull cord around sharp edges or corners
 - Do not unplug by pulling on cord.
 - Do not stretch cord.
 - Do not handle plug with wet hands.
 - Keep cord away from heated surfaces.
 - Report machine damage or faulty operation immediately to your distributor.
 - Follow mixing and handling instructions on chemical containers.
 - Before leaving or servicing machine:
 - Turn off machine.
 - Unplug cord from wall outlet.
 - When servicing machine:
 - Unplug cord from wall outlet.
 - Avoid moving parts.
 - Do not wear loose jackets, shirts, or sleeves.
 - Use manufacturer supplied or approved replacement parts.

Machine must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electrical shock. This machine is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be plugged into an appropriate outlet that is properly installed in accordance with all local code and ordinances. Do not remove ground pin; if missing, replace plug before use.

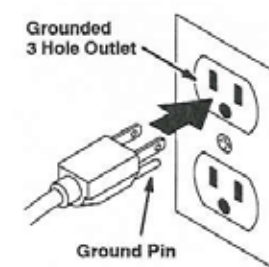

⚠ WARNING: Hazardous Voltage. Shock or electrocution can result. Always unplug machine before servicing.

⚠ WARNING: Flammable materials can cause an explosion or fire. Do not use flammable materials in tank(s).

⚠ WARNING: Flammable materials or reactive metals can cause an explosion or fire.

SYMPTOM: UNIT WILL NOT TURN ON:
PROBLEM: Not plugged in.
SOLUTION: Plug machine in proper outlet.
PROBLEM: Circuit breaker has popped.
SOLUTION: Reset circuit breaker. Make sure no other items are running on the same circuit as machine. Outlet must be a 20-amp circuit.

SYMPTOM: PUMP IS NOT RUNNING PROPERLY:
PROBLEM: Quick disconnects are not completely locked together.
SOLUTION: Snap quick disconnects firmly together.

PROBLEM: The solution tank is empty.
SOLUTION: Fill the solution tank up with a premixed liquid detergent.

PROBLEM: Jet on upholstery tool is clogged.
SOLUTION: Clean jet with soft wire brush or remove jet and flush clean.

PROBLEM: Filters are clogged.
SOLUTION: Remove filters and rinse clean with water.

PROBLEM: Heater is blocked with hard water deposits.
SOLUTION: Flush out heaters with Mytee Products, Inc. system maintainer solution.

PROBLEM: Brass check valve is stuck.
SOLUTION: Replace with new check valve.

PROBLEM: Pump wire has become disconnected.
SOLUTION: Reconnect wire.

PROBLEM: Switch on switch plate is bad.
SOLUTION: Replace switch.

PROBLEM: Pump motor brushes are worn out.
SOLUTION: Replace pump.

SYMPTOM: HEATER IS NOT WORKING PROPERLY:
PROBLEM: The back up sensor, mounted on the heater has popped.
SOLUTION: Reset sensor by pushing in button.

PROBLEM: Heating element is bad.
SOLUTION: Replace element.

PROBLEM: VACUUM MOTOR IS NOT WORKING PROPERLY:
PROBLEM: Hose not connected tightly to upholstery tool or machine.
SOLUTION: Connect hose tightly.

PROBLEM: Drain valve is not shut completely.
SOLUTION: Close drain valve completely.

PROBLEM: Vacuum tank lid is not on tightly.
SOLUTION: Secure the vacuum tank tightly.

PROBLEM: Ball float is shut off.
SOLUTION: Empty the vacuum tank of all wastewater.

PROBLEM: Water is coming out of vacuum motor.
SOLUTION: Use a low foaming detergent.

PROBLEM: Upholstery tool or wand is clogged with hair, carpet fibers and or debris.
SOLUTION: Clean upholstery tool or floor wand jets.

PROBLEM: Ball float is not installed correctly.
SOLUTION: Make sure that ball float is firmly installed on the elbow.

TROUBLESHOOTING

- SYMPTOM:** UNIT WILL NOT TURN ON:
PROBLEM: Not plugged in.
SOLUTION: Plug machine in proper outlet.
PROBLEM: Circuit breaker has popped.
SOLUTION: Reset circuit breaker. Make sure no other items are running on the same circuit as machine. Outlet must be a 20-amp circuit.
- SYMPTOM:** PUMP IS NOT RUNNING PROPERLY:
PROBLEM: Quick disconnects are not completely locked together.
SOLUTION: Snap quick disconnects firmly together.
- PROBLEM:** The solution tank is empty.
SOLUTION: Fill the solution tank up with a premixed liquid detergent.
- PROBLEM:** Jet on upholstery tool is clogged.
SOLUTION: Clean jet with soft wire brush or remove jet and flush clean.
- PROBLEM:** Filters are clogged.
SOLUTION: Remove filters and rinse clean with water.
- PROBLEM:** Heater is blocked with hard water deposits.
SOLUTION: Flush out heaters with Mytee Products, Inc. system maintainer solution.
- PROBLEM:** Brass check valve is stuck.
SOLUTION: Replace with new check valve.
- PROBLEM:** Pump wire has become disconnected.
SOLUTION: Reconnect wire.
- PROBLEM:** Switch on switch plate is bad.
SOLUTION: Replace switch.
- PROBLEM:** Pump motor brushes are worn out.
SOLUTION: Replace pump.
- SYMPTOM:** HEATER IS NOT WORKING PROPERLY:
PROBLEM: The back up sensor, mounted on the heater has popped.
SOLUTION: Reset sensor by pushing in button.
- PROBLEM:** Heating element is bad.
SOLUTION: Replace element.
- PROBLEM:** VACUUM MOTOR IS NOT WORKING PROPERLY:
PROBLEM: Hose not connected tightly to upholstery tool or machine.
SOLUTION: Connect hose tightly.
- PROBLEM:** Drain valve is not shut completely.
SOLUTION: Close drain valve completely.
- PROBLEM:** Vacuum tank lid is not on tightly.
SOLUTION: Secure the vacuum tank tightly.
- PROBLEM:** Ball float is shut off.
SOLUTION: Empty the vacuum tank of all wastewater.
- PROBLEM:** Water is coming out of vacuum motor.
SOLUTION: Use a low foaming detergent.
- PROBLEM:** Upholstery tool or wand is clogged with hair, carpet fibers and or debris.
SOLUTION: Clean upholstery tool or floor wand jets.
- PROBLEM:** Ball float is not installed correctly.
SOLUTION: Make sure that ball float is firmly installed on the elbow.

OPTIONAL ACCESSORIES


The following accessories and tools are available for this unit, and can be purchased separately at your local Mytee dealer. You can find more information on any of them at www.mytee.com



3" Stainless Steel Crevice Tool (8400)



Stainless Steel Upholstery Tool (8700)

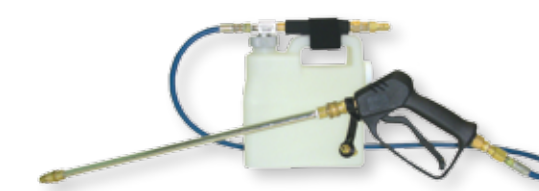

9000 - Chemical Injection Sprayer & Adjustable Spray Gun



Electric Converter Kit™ (5000)



Mini-Tradewind™ (2700)



Mytee-Dry™ (2200)



System Maintainer (3601)



Tradewind™ Airmotor (3000)

- SS-EZ Kit Includes:**
- 8300 - 12" E.Z. Glider™, S-Bend Dual Jet Wand with glide
 - 8100 - 25' Vacuum & Solution Hose