

- 1) Install bottom base with casters to each tube as shown above using 1/4" x 13/4" bolt and tighten lock nut.
- 2) To replace vinyl panels, grasp curtain rod at end away from spring retainer clip and slide rod towards clip. This will release rod from frame.
- 3) Periodically check all fasteners for tightness. To clean vinyl panels use only a mild soap and water.

WARNING

- To avoid injury, never stand or ride on screen legs.
- Keep casters free of thread, lint, hair and other debris.
- Be sure casters roll freely and turn easily at all times.
- Do not use for personal support.
- Be careful when rolling over uneven surfaces.
- Do not hang anything on screen frames.





To Purchase - www.UNOCLEAN.com

phone: 888-226-2724