



# R & B Wire Products, Inc.


## Assembly Instructions

### FOR BUSHEL TRUCKS


We recommend that two people work together to assemble these products.




**1** Begin by threading the plain nuts 1½" onto each wire upright. Bring the uprights to a verticle position. Place the steel tubular frame onto the uprights. With each upright coming through a hole in the frame.

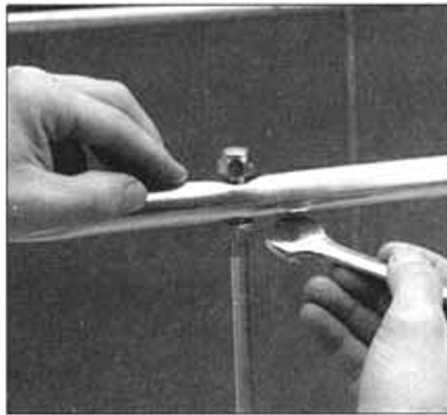


**2** Place the lock nuts on top and tighten. Be sure the uprights do not protrude above the lock nuts. Tighten plain nuts up against the bottom of the tubular frame.

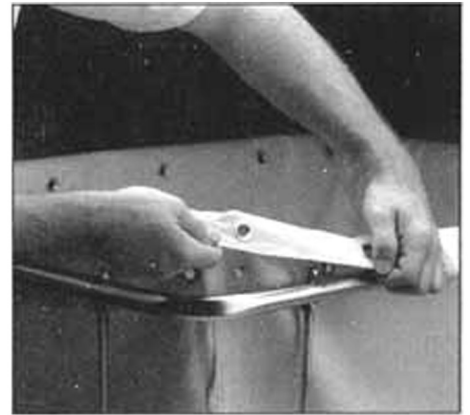

**3** Place liner in the position inside the frame. Be sure seams line up in corners. Fold the edge of the liner over the top edge of the tubular frame. Be sure the grommets line up for lacing.

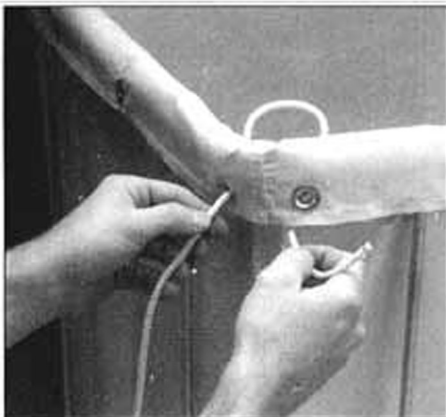

**4** Begin lacing by tying a knot in one end of the rope. Start at any corner. Lace the (other end) of the rope through the first set of grommets from the outside again. Be sure the rope stays under the steel tubular frame.

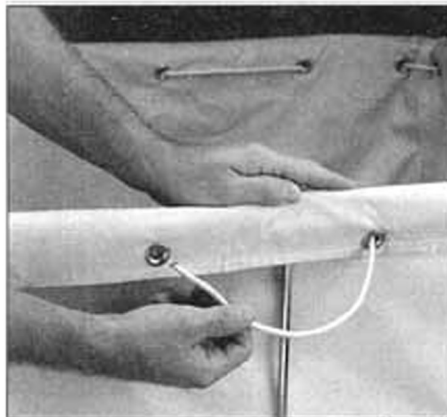

**5** String the rope outside of the frame uprights as you lace around the cart. Keep the rope tight as you go.



**6** Making sure the rope stays tight, finish the lacing by securing the rope with a knot.

#### **WARNING**

- Never allow children (or adults) to ride in or on carts.
- Be sure casters roll and swivel freely at all times.
- Place all loads in center of basket for load balance.



This soil resistant liner can be removed for washing (hot, soapy water up to 180°F), cleaning and disinfecting without damage. Add a cover cap and you have a completely dust-proof basket. Spring platform lifts are also available to reduce the risk of injury when lifting heavy loads.

THANKS AGAIN FOR  
SELECTING OUR PRODUCTS!

YOUR RELIABLE PARTNER,



**Revised Bushel Truck Instructions**

1. Begin by sliding the liner pockets over the uprights. Thread the plain nuts 1 ½” onto each wire upright. Place the steel tubular frame onto the uprights, with each upright coming through a hole in the frame.



2. Place the lock nuts on top and tighten. Be sure the uprights do not protrude above the lock nuts.
3. Fold the edge of the liner over the top edge of the tubular top frame. Be sure the grommets line up for fastening.
4. Place the female snap rivet into the grommet on the inside of the liner. Lineup the outer grommet to the inside grommet and place the male snap rivet through the grommet and snap together. Continue until all grommets have been fastened.

Finished Product Photo:



**WARNING:**

- a. Never allow children (or adults) to ride in or on carts.
- b. Be sure casters roll & swivel freely at all times.
- c. Place all loads in center of basket for balance.
- d. Maximum cart capacity:

406	250lbs.	414	500lbs.
408	300lbs.	416	525lbs.
410	350lbs.	418	550lbs.
412	400lbs.	420	600lbs.