

INSTALLATION GUIDE FOR THE EBG DUST CONTAINMENT SYSTEM


Before beginning, open the box and make certain you have all the pieces to install your Dust Containment System. Items included should be:

- Dust Skirt with velcro strips (attached)
- Vacuum hose
- 1 1/2" connector
- Zinc vacuum attachment
- #6 32x1/2" thread forming screws (2)
- Black velcro strap
- Alcohol pads (2)

Tools and items you need to provide include:

- Hammer
- 60 grit sandpaper
- 1/4" socket and driver or wrench


Step 1: While facing the front of the machine, look on your left-hand side and locate the circular knockout blank. This must be removed prior to installing your kit. Use a hammer to gently tap out the blank. You may need to strike the blank multiple times to dislodge.

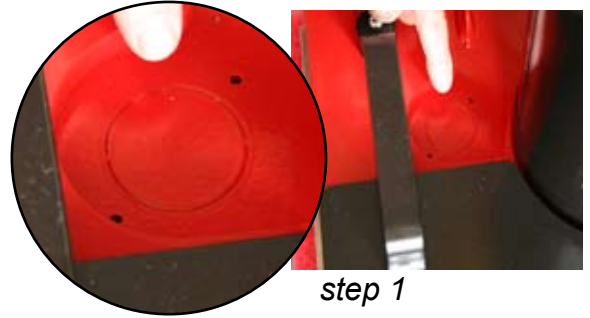

step 1

Step 2: Tilt the machine forward to allow the blank to slide out the front. Discard the blank.

Step 3: Install hose coupling to machine base. Line up holes with pre-punched holes on base. Use the two #6 screws to attach the hose coupling with a 1/4" socket or wrench. Install one end of the hose to the hose coupling.

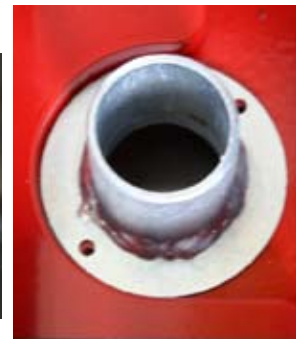

step 3

Step 4: Place the free end of the hose attachment close to the machine handle and wrap with the black Velcro strap. Insert end of strap through slot in the Velcro strap and pull tightly to secure the hose to the handle.



step 4

Step 5: Attach the chrome hose connector to the free end of the hose.



step 5

Step 6: Lightly scuff the outer edge of the base plate with 60 grit sandpaper. This allows the dust skirt Velcro straps to adhere properly to the base plate. Go all the way around the base with the sandpaper.



*step 6.1
sanding*



*step 6.2
scuffed finish*



*step 6.3
before scuff*



*step 6.4
after scuff*

Step 7: Wipe the scuffed edges with the alcohol pads (2) to remove debris. Once complete, remove the 4 Velcro strips (2 long, 2 short) from the dust skirt. Be careful not to remove the paper backing that covers the glue on the velcro strip during this process.




step 7.1



step 7.2

Step 8: Once the Velcro is removed from the Dust Skirt, remove paper backing from Velcro strips and, following the base edges, apply to the machine. It is easiest to start in one corner and align the strips in this fashion. Make sure to press the Velcro firmly against the base for maximum adherence.

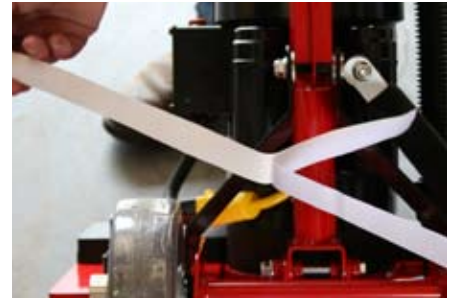

step 8.1



step 8.2

Step 9: Install the Dust Skirt by taking one of the corners on a long end and affix to the Velcro strips you installed on the machine. Make certain that the Velcro is on the top side for proper installation. Press the skirt firmly into the Velcro. The two ends should meet in the back between the wheels.



step 9.1



step 9.2



step 9.3