


# NorthStar PCO In-Duct Installation Instructions

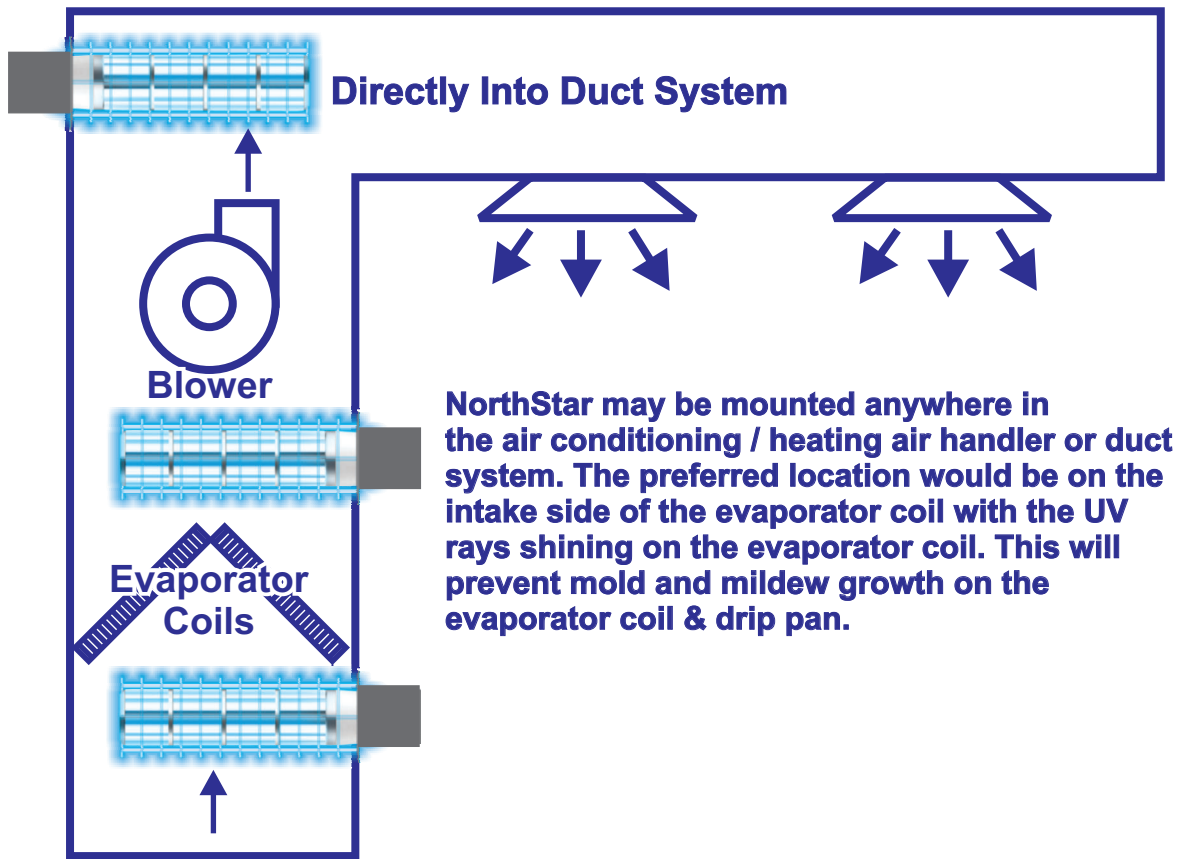

Confirm you have 10" of un-obstructed space behind where you are installing the unit.

Tape the template label to the area you will be installing the unit.

Drill the four screw holes.

Drill or cut a 5 3/4" hole in the center of the template.

If you are installing into foam duct board do the following:

Open the screw holes to 1/2".

Hold an anchor by the metal end flat against its plastic strap.

Push the metal end of the anchor completely through the hole and with your other hand reach through the large middle hole and straighten the metal end so it is flat against the inside of the duct work at a 45 degree angle.

Pull back on the plastic straps and push the plastic cap with the washer up tight against the duct work.

Bend the plastic straps back and forth to break them off.

Install the NorthStar into the large hole and install four screws to hold in place.

**DO NOT OVER TIGHTEN SCREWS.**

Plug the NorthStar power cord into a 110 Volt electrical outlet.