

Wet/Dry Vacuums

Part No. VB51BZ.20.96.01

Operator's Manual



8 Gallon Model No. VS810WD

FOR YOUR SAFETY

Read and understand this manual before use Keep this manual for future reference



TABLE OF CONTENTS

SECTION	PAGE
Warranty	
Safety Instructions and Warnings	
(arounding instructions	
Extension Cord.	4
Unbacking and Unecking Carron Contents	
General Assembly Instructions. Dry Vacuum Operation.	5
Dry Vacuum Operation	6
Wet Vacuum Operation	
Blowing Operation	
Maintananca	
Installing & Cleaning Carridge Fliter	
Troubleshooting	10
Exploded View and Parts List	11
	12

Thank you for purchasing this CHANNELLOCK[™] wet/dry vacuum cleaner. Feel confident that with CHANNELLOCK[™] you are obtaining a high quality product engineered for optimal performance. This vacuum is capable of picking up liquids and dry materials.

FOR YOUR SAFETY CAREFULLY READ AND UNDERSTAND ALL INSTRUCTIONS

WARRANTY

We take pride in producing a high quality, durable product. This CHANNELLOCKTM product carries a limited two (2) year warranty against defects in workmanship and materials from date of purchase under normal household use. If product is to be used for commercial, industrial or rental use, a 90 day limited warranty will apply. Warranty does not apply to defects due to direct or indirect abuse, negligence, misuse, accidents, repairs or alterations and lack of maintenance. Please keep your receipt as proof of purchase. This warranty gives you specific legal rights, and you may have other rights, which vary from state to state. For product service call Customer Service at (866) 384-8432.

DO IT BEST CORP. IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE. THE LIMITED WARRANTY IS THE ONLY WARRANTY THAT APPLIES TO THIS PRODUCT AND DO IT BEST CORP. SPECIFICALLY DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

SAFETY INSTRUCTIONS & WARNINGS

IMPORTANT SAFETY INSTRUCTIONS

READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE USING THIS VACUUM

Read and understand this owner's manual and all labels on the Wet/Dry Vacuum cleaner before operating. Safety is a combination of common sense, staying alert and knowing how your vacuum works. Use this Wet/Dry Vac only as described in this manual. To reduce the risk of personal injury or damage to your Wet/Dry Vac, use only **CHANNELLOCK**TM recommended accessories.

Household Type

SAVE THIS MANUAL FOR FUTURE REFERENCE.

When using an electrical appliance, basic precautions should always be followed including the following:

$WARNING: \hbox{ to reduce the risk of fire, electric shock or injury: }$

- Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing. Connect to a properly grounded outlet only. See grounding instructions.
- Do not run vac unattended.
- Do not vacuum, or use this Wet/Dry Vac near flammable liquids, gases, or explosive vapors like gasoline or other fuels, lighter fluids, cleaners, oil-based paints, natural gas, hydrogen, or explosive dusts like coal dust, magnesium dust, grain dust, or gun power. Sparks inside the motor can ignite flammable vapors or dust.
- Do not vacuum anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Keep cord away from heated surfaces.
- Do not expose to rain. Store indoors.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not use with damaged cord, plug or other parts.
- If your Wet/Dry Vac is not working as it should, has missing parts, has been dropped or damaged, left outdoors or dropped into water, return it to an independent service center.
- Do not pull or carry by cord, use cord as handle, close a door on cord, or pull cord around sharp edges or corners.
- Do not run Wet/Dry Vac over cord.
- Do not handle plug or the Wet/Dry Vac with wet hands.
- To reduce the risk of health hazards from vapors or dusts, do not vacuum toxic materials.
- Do not use or store near hazardous materials.
- Do not use this Wet/Dry Vac with a torn filter or without the filter installed except when vacuuming liquids as described in the operation section of this manual.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- To reduce the risk of injury from accidental starting, unplug power cord before changing or cleaning filter.
- Do not leave Wet/Dry Vac unattended when plugged in. Unplug from outlet when not in use and before servicing.
- Turn off Wet/Dry Vac before unplugging.
- Do not put any object into ventilation openings. Do not vacuum with any ventilation openings blocked; keep free of dust, lint, hair or anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- To reduce the risk of falls, use extra care when cleaning on stairs.

When using as blower:

- Direct air discharge only at work area.
- Do not use Wet/Dry Vac as a sprayer.
- Do not direct air at bystanders.
- · Keep children away when blowing.
- Use safety goggles.


GROUNDING INSTRUCTIONS

This product must be grounded. In the event of a malfunction or breakdown, grounding provides a path of least resistance for electrical current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

WARNING: IMPROPER CONNECTION OF THE EQUIPMENT-GROUNDING CONDUCTOR CAN RESULT IN A RISK OF ELECTRICAL SHOCK. CHECK WITH A QUALIFIED ELECTRICIAN OR SERVICE PERSON IF YOU ARE IN DOUBT AS TO WHETHER THE OUTLET IS PROPERLY GROUNDED. DO NOT MODIFY THE PLUG PROVIDED WITH THE VACUUM CLEANER IF IT WILL NOT FIT THE OUTLET; HAVE A PROPER OUTLET INSTALLED BY A QUALIFIED ELECTRICIAN.

This wet/dry vacuum cleaner is for use on a nominal 120V circuit and has a grounding plug that looks like the plug illustrated. A temporary adaptor that looks like the adaptor illustrated maybe used to connect this plug to a 2-pole receptacle, as shown. A temporary adaptor should be used until a properly grounded outlet can be installed by a qualified electrician. The green colored rigid ear, lug, tab or the like extending from the adaptor must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adaptor is used, it must be held in place by a metal screw.

NOTE: In Canada, the use of temporary adaptors is not permitted by the Canadian Electrical Code.

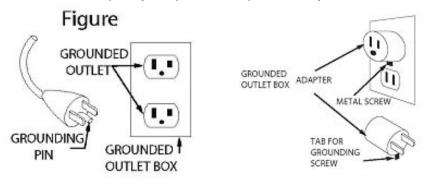


CAUTION: TO REDUCE THE RISK OF INJURY FROM MOVING PARTS- UNPLUG BEFORE SERVICING.

EXTENSION CORDS

When using an extension cord with your Wet/Dry Vac refer to the following table to determine the required A.W.G. wire size. Use only a 3-wire extension cord which has a 3-prong grounding type plug and 3-hole receptacles which accept the tool's plug. Before using the vacuum cleaner, make sure the power cord and extension cord are in good working conditions. Make repairs or replacements before using the vacuum cleaner. Only use extension cords that are rated for outdoor use.

	Length of Extension Cord			
	25 Feet	50 Feet	100 Feet	150 Feet
110V-120V	7.5 Meter	15.25 Meters	30.5 Meters	45.7 Meters
Amps	A.W.G Wire Size			
0-6	18	16	16	14
7-10	18	16	14	12
11-12	16	16	14	12
13-16	14	12	Not recon	nmended

UNPACKING AND CHECKING CARTON CONTENTS

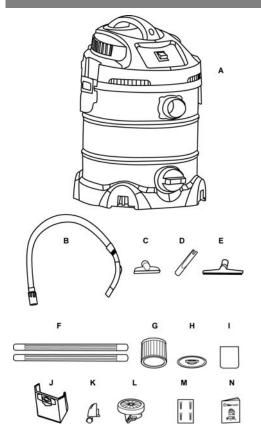


Remove entire contents of carton. Check each item against the carton contents list.

Carton Contents List

DescriptionQTY
Vac Assembly1
Flex Hose With Air Control Nozzle1
2-in 1 Utility Nozzle1
Crevice Tool1
Floor Brush/Squeegee1
Extension Wands2
Cartridge Filter1
Filter Retainer1
Foam Sleeve Filter1
Collection Bag1
Foot With Caster2
Rear Foot With Wheel2
4 Screws (Bag)1
Operator's Manual1

NOTE: The hose and accessories for this vacuum are 1.25 inch diameter.

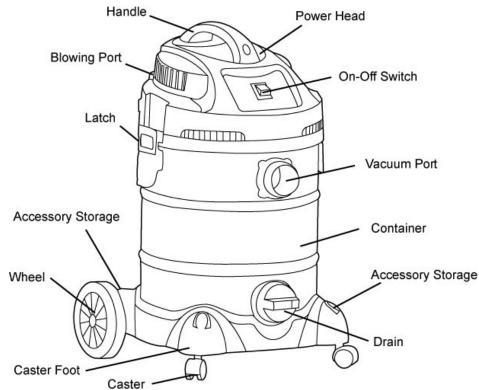

GENERAL ASSEMBLY INSTRUCTIONS


12

WARNING: DO NOT PLUG IN POWER CORD TO POWER OUTLET, MAKE SURE PLUG IS DISCONNECTED BEFORE ASSEMBLING THE WET/DRY VAC

UNPACKING YOUR WET/DRY VACUUM & GENERAL ASSEMBLY

- 1. Verify that the power cord is disconnected from the outlet. (fig.1)
- 2. Undo the latches. (fig.2)
- 3. Lift the power head off the container. (fig.3)
- 4. Remove the contents from inside the container, make sure you have all contents as listed on page 6. (fig.4)
- 5. With the power head removed, turn the container upside down. Insert the two (2) feet with casters into the front slots and apply pressure into place and secure them with supplied screw. Do not over- tighten screws. (fig.5a)
- 6. Find the rear wheel and foot marked "1" and insert it into the rear slot on base marked "1". Insert the rear wheel and foot marked "2" into rear slot "2" on base and secure them with the supplied screws. Do not over-tighten screws. (fig.5b)
- 7. Your vacuum comes ready for dry vacuum cleaning with cartridge filter pre-installed. If cartridge filter is not installed, refer to page 10 for filter installation. (fig.6 & 7)
- 8. Optional, for improved dust filtering, fit collection bag flange onto the inlet stub, taking care not to damage the bag. (fig.8)
- 9. For wet vacuum cleaning, install the supplied foam filter. (fig.9) See page 10 for filter installation.
- 10. Place the power head back on the container, and secure into place using the 2 side latches. (fig.10 & fig.11)
- 11. Secure the large end of the hose into the vacuum port on the container and screw into place. (fig.12)
- 12. Choose the desired accessories and extension wands and push onto the suction tube. (fig.13)

DRY-VACUUM OPERATION

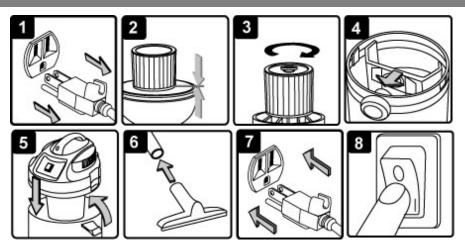

DRY VACUUMING

WARNING: BE SURE TO READ, UNDERSTAND, AND APPLY INFORMATION, ENTITLED 'SAFETY INSTRUCTIONS & WARNINGS'. DO NOT VACUUM IN AREAS WITH FLAMMABLE GASES, VAPORS, OR EXPLOSIVE DUSTS IN THE AIR. FLAMMABLE GASES OR VAPORS INCLUDE BUT ARE NOT LIMITED TO; LIGHTER FLUID, SOLVENT TYPE CLEANERS, OIL-BASE PAINTS, GASOLINE, ALCOHOL OR AEROSOL SPRAYS. EXPLOSIVE DUSTS INCLUDE BUT ARE NOT LIMITED TO; COAL, MAGNESIUM, GRAIN OR GUN POWDER. TO REDUCE THE RISK OF HEALTH HAZARDS FROM VAPORS OR DUST, DO NOT VACUUM TOXIC MATERIALS.

CAUTION:

• Do not vacuum drywall dust or fireplace soot or ash with standard Wet/Dry filter. This is a very fine dust which will not be captured by the filter and may cause damage to motor. When vacuuming fine dust use a fine dust filter (sold separately).

WARNING: DO NOT PLUG IN POWER CORD TO POWER OUTLET. MAKE SURE PLUG IS DISCONNECTED BEFORE CHANGING AND CLEANING FILTERS.

- 1. Verify that the power cord is disconnected from the outlet. (fig.1)
- 2. In order to prepare your vacuum for dry vacuuming, verify that the cartridge filter is securely mounted. With power head removed and in upside down position, make sure the filter is pushed in until it stops against the power head and the retainer is installed. (fig.2 & 3) (Your Wet/Dry Vac comes with the cartridge filter pre-installed, if not, see page 10 for installation instructions.)
- 3. Optional, for improved dust filtering, fit collection bag flange onto the inlet stub, taking care not to damage the bag. (fig.4)
- 4. Place the power head back on the container, and secure it in place using the latches. (fig.5)

OPERATING INSTRUCTIONS: DRY VACUUMING

- 5. Insert the locking end of the hose into the vacuum port and screw in place. Push the required attachment onto the free end of the hose or extension. (fig.6)
- 6. Plug in the power cord into the outlet. (fig.7)
- 7. Turn the motor on by flipping the switch to the 'I' ON position. (fig.8)
- 8. Once you have completed vacuuming, flip the switch to the 'O' OFF position and unplug the power cord from the outlet.

 $O = OFF \quad I = ON$

DO NOT USE THE CARTRIDGE FILTER FOR LIQUID VACUUMING DO NOT USE COLLECTION BAG FOR LIQUID VACUUMING

WET-VACUUM OPERATION













LIQUID VACUUMING

WARNING: BE SURE TO READ, UNDERSTAND, AND APPLY INFORMATION, ENTITLED 'SAFETY INSTRUCTIONS & WARNINGS'. DO NOT VACUUM IN AREAS WITH FLAMMABLE GASES, VAPORS, OR EXPLOSIVE DUSTS IN THE AIR. FLAMMABLE GASES OR VAPORS INCLUDE BUT ARE NOT LIMITED TO; LIGHTER FLUID, SOLVENT TYPE CLEANERS, OIL-BASE PAINTS, GASOLINE, ALCOHOL OR AEROSOL SPRAYS. EXPLOSIVE DUSTS INCLUDE BUT ARE NOT LIMITED TO; COAL, MAGNESIUM, GRAIN OR GUN POWDER. TO REDUCE THE RISK OF HEALTH HAZARDS FROM VAPORS OR DUST, DO NOT VACUUM TOXIC MATERIALS.

WARNING: DO NOT PLUG IN POWER CORD TO POWER OUTLET. MAKE SURE PLUG IS DISCONNECTED BEFORE CHANGING AND CLEANING FILTERS.

- 1. Verify that the power cord is disconnected from the outlet. (fig.1) Make sure that the container is clean and free from dust and dirt.
- 2. Remove cartridge filter and collection bag, then carefully install the foam sleeve filter over the filter cage and place the power head back on the container. (fig.2) See filter installing instructions on page 11.

DO NOT USE THE CARTRIDGE FILTER FOR LIQUID VACUUMING.
DO NOT USE COLLECTION BAG FOR LIQUID VACUUMING

OPERATING INSTRUCTIONS – WET VACUUMING

- 3. Fit the desired nozzle to the vacuum hose. (fig.3)
- 4. Verify that the switch is in the 'O' OFF position before plugging the power cord into the outlet. (fig.4)
- 5. Turn the motor on by flipping the switch to the 'l' ON position. (fig.5)
- 6. After use, empty the container by unscrewing the drain cap and drain liquids into suitable receptacle or drain. (fig.6) Remember to refit the drain cap to the container after draining container.

IMPORTANT! When vacuuming large quantities of liquids, do not immerse the nozzle completely in the liquid; leave a gap at the tip of the nozzle opening to allow air inflow. The machine is fitted with a float valve that stops the suction action when the container reaches its maximum capacity. You will notice an increase in motor speed. When this happens, turn off the machine, disconnect from power supply, and drain the liquid into a suitable receptacle or drain. To continue vacuuming, refit the container with the drain cap. After wet vacuuming, turn the machine off and remove plug from power supply. Empty the container, clean and dry the inside and outside before storage.

REMEMBER! The foam filter must be removed after wet vacuuming, and a cartridge filter must be installed before dry vacuuming again.

BLOWING OPERATION













This Wet/Dry Vac has blowing capabilities. To use the blower feature follow the instructions listed.

WARNING: ALWAYS WEAR SAFETY GOGGLES COMPLYING WITH ANSI Z87.1 (OR IN CANADA, CSAZ94.3) BEFORE USING BLOWER.

WARNING: KEEP BYSTANDERS CLEAR FROM BLOWING DEBRIS.

WARNING: WEAR A DUST MASK IF BLOWING CREATES DUST THAT MIGHT BE INHALED.

- 1. Verify that the power cord is disconnected from the outlet. (fig.1)
- 2. Make sure the container is empty before using as a blower.
- 3. Remove hose from the vacuum port.
- 4. Insert the large end of the hose into the blowing port on the back side of the power head and screw into position. (fig.2)
- 5. Fit the desired extension wand and / or nozzle to the vacuum hose. (fig. 3)
- 6. Verify that the switch is in the 'O' OFF position before plugging the power cord into the outlet. (fig.4, fig.5)
- 7. Before turning on the vac, firmly hold loose end of the hose. Turn the motor on by flipping the switch to the 'I' ON position. (fig.6)

MAINTENANCE









WARNING: DO NOT PLUG IN POWER CORD TO POWER OUTLET. MAKE SURE PLUG IS DISCONNECTED BEFORE CHANGING AND CLEANING FILTERS.

- 1. Verify that the power cord is disconnected from the outlet. (fig.1)
- 2. Disconnect the hose from the vacuum, turning large end in counter clockwise direction. (fig.2)
- 3. Undo the latches and remove the power head from the container. (fig.3)
- 4. Clear all dirt or debris from the container and hose. (fig.4)
- 5. Check the hose, attachments, and power cord to verify that they have not been damaged.

IMPORTANT! Clean or change the cartridge filter regularly for best performance. **ALWAYS USE CARTRIDGE FILTER FOR DRY VACUUMING**. If the machine is used with out the cartridge filter, the motor will burn out and the warranty will be voided. Always keep spare filters on-hand.

NOTICE! The filters included are made of high quality materials designed to stop small dust particles. The cartridge filter should be used for dry pick-up only. A dry cartridge filter is necessary to pick up dust. If the cartridge filter is wet, it will clog quickly and be very difficult to clean. Handle the filter carefully when removing it for cleaning and replacing it. Check the filters for tears or small holes, a small hole can let dust pass through and out of the cleaner. Do not use a filter with holes or tears, replace it immediately.

WARNING! ALWAYS DISCONNECT THE PLUG FROM THE POWER OUTLET BEFORE REMOVING THE POWER HEAD FROM CONTAINER.

INSTALLING & CLEANING CARTRIDGE FILTERS




Installing Cartridge Filter

- 1. Verify that the power cord is disconnected from the outlet. (fig.1)
- 2. Remove power head and place in upside down position.
- 3. Install the cartridge filter over the filter cage with the flat end of the filter towards the vacuum power head. Carefully push filter in until it stops against the power head. (fig.2 & 3)
- 4. Place filter retainer on top of cartridge filter over the raise lip and tighten down by turning retainer clockwise, do not over tighten. (fig. 4 & 5)

Removing and Cleaning Cartridge Filter

- 1. Unlock and remove the filter retainer by tuning retainer handle counter clockwise.
- 2. Carefully hold and pull the cartridge filter up for removal. (fig.6)
- 3. Clean the cartridge filter by gently tapping or brushing dirt off. Cleaning should not be done indoors in living areas. For optimal performance a new filter is recommended.
- 4. Install cleaned or new filter into place as instructed above in steps 2 and 3 of Installing Cartridge Filter.
- 5. Wet filters should be removed and allowed to air dry for 24 hours before installing onto the filter cage.

INSTALLING & CLEANING FOAM SLEEVE FILTER



Installing Foam Sleeve Filter

- 1. Verify that the power cord is disconnected from the outlet. (fig.1)
- 2. Remove power head and place in upside down position. Follow instructions to remove cartridge filter.
- 3. Carefully slide foam sleeve filter down over the filter cage making sure the whole cage is covered. (fig.2 & 3)
- 4. Replace the power head on to the container.

Cleaning Foam Sleeve Filter

- 1. With the removed power head in the upside down position, carefully remove foam sleeve filter. (fig.4)
- 2. Use a mild soap and water solution to wash foam sleeve filter and rinse with clean water. (fig.5)
- 3. Allow filter to air dry before installing and using again.

TROUBLESHOOTING

WARNING! TO REDUCE THE RISK OF ELECTRIC SHOCK-UNPLUG BEFORE TROUBLESHOOTING

Symptom	Possible Causes	Corrective Action
Vacuum will not operate	No power supply.	1) Check power supply – cord,
		breakers, fuses.
	Faulty power cord.	Unplug and check the power
		cord. If damaged, have it repaired
		by a professional.
	3) Container full.	3) Empty container.
Dust comes out from motor cover.	The cartridge filter or collection	Attach or replace cartridge filter
	bag is missing or damaged.	or collection bag.
Reduced efficiency and	1) There is a blockage in the nozzle	1) Check nozzle, hose and
motor/speed vibration.	or hose, or the container inlet. Or	container inlets for blockage. Take
	dust filter blocked by fine dust.	off the filter and clean it. Or install
		new cartridge filter.

PARTS LIST -EXPLODED VIEW

