

# GL030-0223

### BOWMAN® Signature Series - Glove Box Dispenser - Triple



### Related Products (each sold separately):

 GL030-0233: BOWMAN® Signature Series - Glove Box Dispenser -Cherry Fauxwood ABS plastic - Triple with Dividers (shown below)



### **Product Description:**

- Glove Box Dispenser Triple with Dividers
- · Holds three boxes of gloves
- · Three-way keyholes for vertical or horizontal wall mounting
- BOWMAN® Signature Series Maple Fauxwood ABS Plastic

#### Primary Area for Product Usage:

· Anywhere gloves are needed

#### Dispenses:

- Box(es) no larger than 5.50"W x 10.00"H x 3.75"D (14.0 cm x 25.4 cm x 9.5 cm)
- Box(es) no smaller than 4.50"W x 9.00"H x 3.00"D (11.4 cm x 22.9 cm x 7.6 cm)


### Package Specifications:

- · Package Quantity: 4 per case
- 18"L x 16"W x 10"H (45.7 cm x 40.6 cm x 25.4 cm)
- 8.0 lbs (3.6 kg) approximated

### **Product Specifications** (overall external dimensions):

- 17.00"W x 10.13"H x 4.00"D (43.2 cm x 25.7 cm x 10.2 cm)
- 1.4 lbs (0.6 kg) approximated

### **Mounting Specifications:**

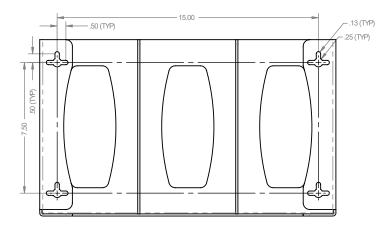


## GL030-0223


## **BOWMAN®** Signature Series - Glove Box Dispenser - Triple

**Installation Instructions/Characteristics & Care** 

### Installation

Always mount dispensers securely prior to loading with product.

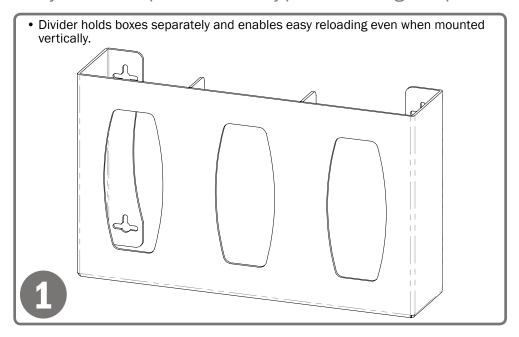

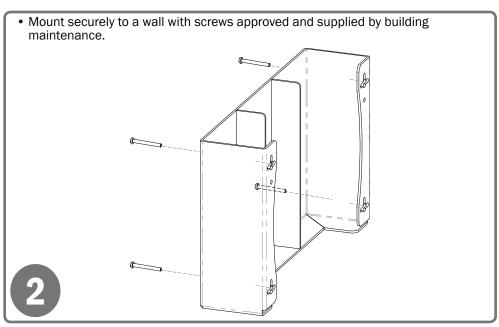

### Parts included:

Dispenser

#### **Tools Required:**

No tools required to assemble dispenser

# Care and Construction Fauxwood ABS Plastic

### Material Characteristics

# Designed for Long-Term, Heavy-Duty Applications

The combination of copolymers (Acrylonitrile, Butadiene, and Styrene) gives ABS an excellent combination of strength, rigidity, and toughness. The fauxwood finish is ARVINYL laminate created from a semi-rigid film.

ABS is chemical and stress-crack resistant. It is tough, dimensionally stable, and will hold up to long-term use. To ensure product longevity, fauxwood products should not be mounted in very hot or cold areas.

### Care and Cleaning

Use mild soap and water to clean. Petroleum-based oils, solvents, and paints should not be used.

Standard hospital cleaning supplies are approved for use on our ABS plastic products.