



Product Description:

- Bulk Dispenser Triple
- Holds individually packaged sterile gloves or miscellaneous items
- Three bulk compartments
- Pivot hinge lid
- Top loading and dispensing
- · Keyholes for wall mounting
- Clear PETG Plastic

Primary Area for Product Usage:

· Anywhere bulk items are needed

Dispenses:

Personal protection equipment or other miscellaneous items in bulk quantity

Package Specifications:

- Package Quantity: 1 per case
- 20"W x 12"H x 8"D (50.8 cm x 30.5 cm x 20.3 cm)
- 6.0 lbs (2.7 kg) approximated

Product Specifications (overall external dimensions):


- 17.80"W x 11.50"H x 5.86"D (45.2 cm x 29.2 cm x 14.9 cm)
- 3.3 lbs (1.5 kg) approximated

Mounting Specifications:



GN005-0212: Gown Dispenser - Large Volume (shown below)

PS032-0212: Protection System - Large Volume

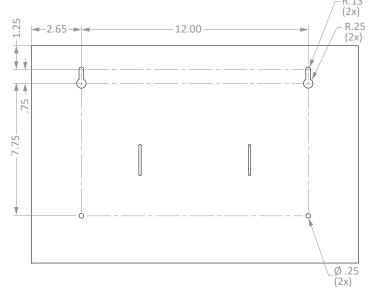




BK006-0111

Bulk Dispenser - Triple

Installation Instructions/Characteristics & Care

Installation

Always mount dispensers securely prior to loading with product.

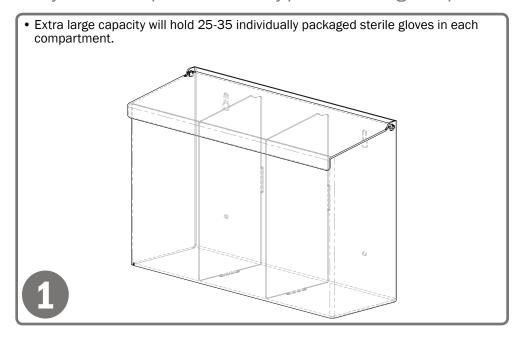

• Mount securely to a wall with screws approved and supplied by building maintenance.

2

Parts included:

Dispenser

Tools Required:

No tools required to assemble dispenser

Care and Construction PETG Plastic

Material Characteristics

Designed for Long-Term, Heavy-Duty Applications

Copolyester resin is designed for heavy-duty applications, and is used by BOWMAN® Dispensers. We never use acrylic in our products.

Copolyester (PETG) is typically 15-20 times tougher than general purpose acrylic. PETG is made to withstand handling and reduce losses due to breakage.

PETG resists a variety of chemicals and commonly used cleaning agents. It is tough and durable (not brittle), providing years of trouble-free functionality and long life.

Clear optical characteristics mean the viewer can see the content, read text, and see true colors through the material. It complies with FDA regulations for food contact.

Care and Cleaning

Most cleaning chemicals do not weaken the surface or cause damage to the material. Suggested cleaning method is to use a soft cloth, warm water, and mild soap.