BOWMAN[®] Dispensers Organize-Contain-Comply[®]

CT204–0000 Deluxe Rolling Storage Cart with 5" Casters



Product Description:

- Deluxe Rolling Storage Cart with 5" Casters
- Versatile: Use as a Phlebotomy, IV, Vaccination, Refreshment, Craft Organization Cart and more
- · Lightweight with easy and comfortable maneuvering
- Large work surface with integrated drip groove to contain spills
- Industry-recognized 5" locking casters for quality and durability
- Ergonomic design promotes superior posture and reduces back and shoulder strain
- White Powder-Coated Aluminum Composite Material (ACM), High Density Polyethylene (HDPE), Clear Polycarbonate, and Stainless Steel

Primary Area for Product Usage:

· Anywhere items need to be organized and mobile

Dispensing/Storage Areas:

- Drawers (3):
 - Internal Dims: 11.50"W x 4.50"H x 15.50"D (29.2 cm x 11.4 cm x 39.4 cm)
 - Weight Capacity: 10.0 lbs each (4.5 kg)
- Side Bins (3):
 - Internal Dims: 15.50"W x 4.50"H x 4.50"D (39.4 cm x 11.4 cm x 11.4 cm)
 - Weight Capacity: 10.0 lbs each (4.5 kg)
- Tilt Bins (3 pair):
 - Internal Dims: 4.44"W x 7.13"H x 3.44"D
 - (11.30 cm x 18.1 cm x 8.7 cm)
 - Weight Capacity: 10.0 lbs each (4.5 kg)
- Lower Storage Area:
 - Internal Dims: 12.75"W x 14.00"H x 15.50"D (32.4 cm x 35.6 cm x 39.4 cm)

Product Specifications (overall external dimensions):

- 23.50"W x 42.25"H x 17.75"D (59.7 cm x 107.3 cm x 45.1 cm)
- 73.0 lbs (33.1 kg) approximated

Package Specifications:

- Package Quantity: 1 per pallet
 - 30"L x 30"W x 50"H (76.2 cm x 76.2 cm x 127.0 cm)
 - 98.0 lbs (44.5 kg) approximated +/- 10 lbs

Prop 65:


- Warning: This product contains chemicals known to the State of California to cause cancer and reproductive harm
- <u>www.P65Warnings.ca.gov</u>

BOWMAN® Dispensers Organize-Contain-Comply®

CT204–0000 Deluxe Rolling Storage Cart with 5" Casters Product Features



Elevated handle provides a better option for taller users.

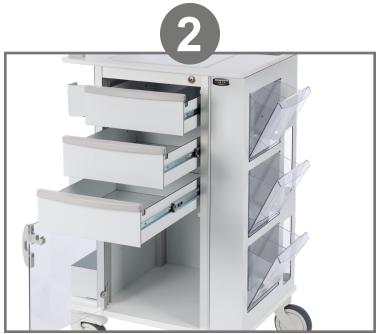

All drawers are locked and unlocked with one key. Side bins tilt for quick and easy access.



Large, locking, doored area provides additional storage for larger items.



Two easy toe lock and unlock casters to immobilize cart for use.





CT204–0000 Deluxe Rolling Storage Cart with 5" Casters

Characteristics & Care

Chassis Powder-Coated ACM	Core/Work Surface High Density Polyethylene Material Characteristics	Door/Bins Polycarbonate
<text><text><text><text><text></text></text></text></text></text>	Designed for Heavy-Duty, Long- Term Use High Density Polyethylene (HDPE) is a thermoplastic polymer made from petroleum. It is one of the most versatile plastics and is used in a wide variety of products. Our HDPE has outstanding strength and a large strength-to-density ratio. It has a high-impact resistance and melting point providing high durability for products.	Designed for Long-Term, Heavy Duty Applications Polycarbonate plastic is a polymer comprised of Bisphenol A and phosgene, which makes it shatter resistant and provides an excellent combination of strength, rigidity, and toughness. This polycarbonate plastic is a clear, lightweight, tough, dimensionally stable thermoplastic. It is shatter resistant and will not soften over time. It is resistant to humidity and temperatures over 300°F. Polycarbonate is virtually unbreakable, making it safe to use in areas where it may be exposed to impact. The transparency allows the viewer to see content, read text, and see true colors through the material.
Care and Cleaning		
For bost results, clean by washing the surface with a diluted solution of a mild		Resistant to stains, polycarbonate

For best results, clean by washing the surface with a diluted solution of a mild, non-abrasive detergent in cold or warm water and a non-abrasive cloth.

Standard hospital cleaning supplies can be used. Dry with a soft cloth. Do not use any solvent-based materials, abrasives (e.g. Scotch-brite, steel wool), or apply excessive force during cleaning. Resistant to stains, polycarbonate is easily cleaned with common cleaners or soap and water. Alcohol is recommended to remove grease or oil. Ammonia and acetone should not be used.

UnoClean.com

(224) 654-6500