



## Companion Products (each sold separately):

- RS001-0223, Respiratory Hygiene Station
- RS005-0223, Respiratory Hygiene Station Locking

### Related Products (sold as kits):

- BD111-0023, Cover Your Cough Compliance Kit
  - RS001-0223, Respiratory Hygiene Station
  - KS010-0434, Floor Stand
  - MP-070, Sign Holder Vertical
- BD116-0023, Cover Your Cough Compliance Kit
  - RS005-0223, Respiratory Hygiene Station Locking
  - KS010-0434, Floor Stand
  - MP-075, Sign Holder Horizontal



### **Product Description:**

- Floor Stand Accommodates a variety of BOWMAN® Respiratory Hygiene Stations
- Column with square base and mounting top plate for companion product
- Hardware is included
- Made of White Powder-Coated Steel

### **Primary Area for Product Usage:**

- · Ports of entry: waiting rooms, lobbies, elevators
- · Medical offices or clinics

### Dispenses:

• Accommodates a variety of BOWMAN® Hygiene Stations


### Package Specifications:

- Package Quantity: 1 per case
- 36"L x 20"W x 6"H (91.4 cm x 50.8 cm x 15.2 cm)
- 20.0 lbs (9.1 kg) approximated

### **Product Specifications** (overall external dimensions):

- 18.00"W x 36.06"H x 18.00"D (45.7 cm x 91.6 cm x 45.7 cm)
- 16.0 lbs (7.3 kg) approximated

### **Mounting Specifications:**

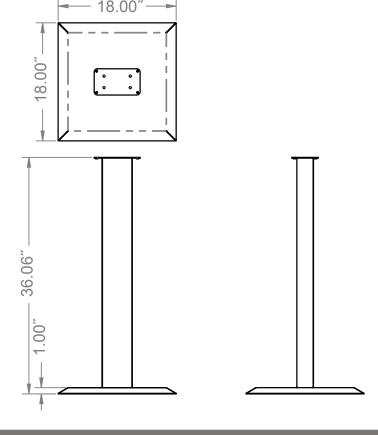



# KS010-0434 Floor Stand

Installation Instructions/Material Care & Construction

### Installation

Always mount dispensers securely prior to loading with product.

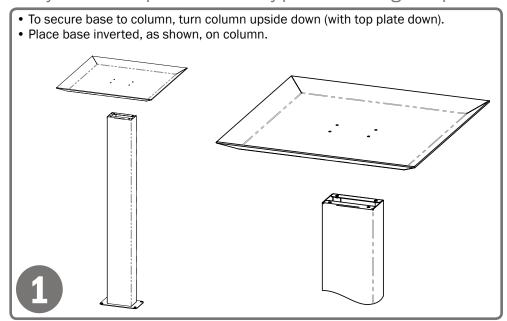

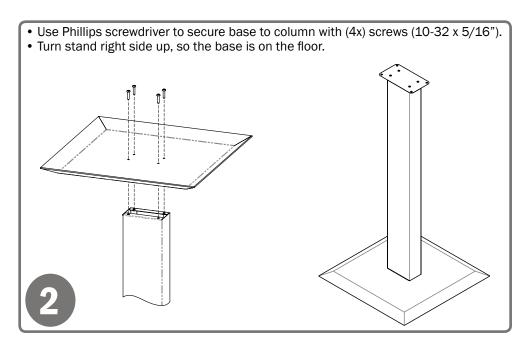

### Parts included:

- Column
- Base
- Hardware

 (8x) Screws: (4x) for stand, (4x) included to attach companion product (Phillips type 10-32 x 5/16")

### **Tools Required:**

• Phillips screwdriver

# Care and Construction Powder-Coated Steel

### **Material Characteristics**

# **Designed for Long-Term Use**

Our steel dispensers and stands are coated with polyester powders which makes them highly resistant to corrosion.

Powder-coated steel is ideal for dispensers used in a healthcare or an industrial setting because it is impact resistant and is not effected by extremes in temperature.

Dispensers and stands made of powder-coated steel are both attractive and functional, providing years of service.

# **Care and Cleaning**

For best results, clean by washing the surface with a diluted solution of a mild, non-abrasive detergent in cold or warm water and a non-abrasive cloth. Standard hospital cleaning supplies can be used. Dry with a soft cloth. Do not use any solvent-based materials, abrasives (e.g. Scotch-brite, steel wool), or apply excessive force during cleaning.