BOWMAN® Dispensers Organize · Contain · Comply





Alternative Products (each sold separately):

- BG001-0111: Bag Dispenser Single, Clear PETG Plastic
- BG001-0212: Bag Dispenser Single, Quartz Beige ABS Plastic
- BG002-0212: Bag Dispenser Double, Quartz Beige ABS Plastic



Product Description:

- Bag Dispenser Single
- Holds a single roll of bags (up to 9.50" long and 3.50" in diameter)
- · Two-way keyholes for vertical or horizontal wall mounting
- Black ABS Plastic

Primary Area for Product Usage:

 Any location which requires bags for storage or refuse at the point of use: laboratory, food service, O.R., clinical areas, dental, veterinary


Dispenses:

- Single roll of individual-sized biohazard, linen, or refuse bags
- Roll no larger than 9.50"W x Ø3.50" (24.1 cm x 8.9 cm)

Product Specifications (overall external dimensions):

- 10.10"W x 3.60"H x 3.95"D (25.7 cm x 9.1 cm x 10.0 cm)
- 0.7 lbs (0.3 kg) approximated

Mounting Specifications:

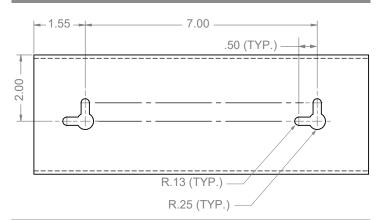

Package Specifications:

- Package Quantity: 12 per case
 - 16"W x 12"H x 12"D (40.6 cm x 30.5 cm x 30.5 cm)
 - -9.0 lbs (4.1 kg) approximated
- Package Quantity: 1 per case
 - -12"W x6"H x 6"D (30.5 cm x 15.2 cm x 15.2 cm)

UnoClean.com

(224) 654-6500

- 2.0 lbs (0.9 kg) - approximated


BOWMAN® Dispensers Organize · Contain · Comply

BGO01–0220 Bag Dispenser – Single

Installation Instructions/Characteristics & Care

Installation

Always mount dispensers securely prior to loading with product.

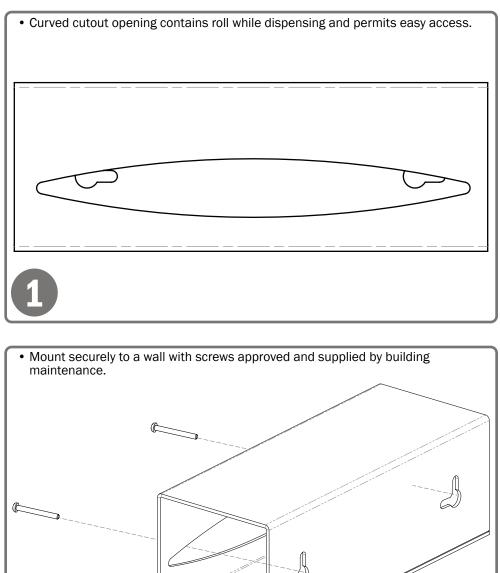

Care and Construction ABS Plastic

Material Characteristics

Designed for Long-Term Heavy-Duty Applications

The combination of copolymers (Acrylonitrile, Butadiene, and Styrene) gives ABS an excellent combination of strength, rigidity, and toughness.

ABS is chemical and stress-crack resistant. It is tough, dimensionally stable, and will hold up to long-term use. It possesses high strength and performance characteristics at a reasonable cost.

Care and Cleaning

Use mild soap and water to clean. Petroleum-based oils, solvents, and paints should not be used.

Standard hospital cleaning supplies can be used.

Parts included:

• Dispenser

Tools Required:

No tools required to assemble dispenser

UnoClean.com (224) <u>654-6500</u>